

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
			⇨	mi	100	600	1200			
				km	150	1000	2000			
			MONTH	1	6	12				
NOTE	HOURS	20	100	200						
*	FUEL LINE						I	—		
*	THROTTLE OPERATION						I	109		
	AIR CLEANER	NOTE 1				C	C	105		
	SPARK PLUG					I	I	113		
*	VALVE CLEARANCE					I	I	116		
	ENGINE OIL				INITIAL= 100 mi (150km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			99		
**	ENGINE OIL STRAINER SCREEN						C	—		
**	ENGINE OIL CENTRIFUGAL FILTER						C	—		
*	ENGINE IDLE SPEED					I	I	112		
*	SECONDARY AIR SUPPLY SYSTEM						I	—		

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

** In the interest of safety, we recommend these items be serviced only by your dealer.