

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
	NOTE	HOURS	20	100	200		
	DRIVE CHAIN	NOTE 1, 2		I, L	[I, L: EVERY 300 mi (500 km) or 50 operating hours]		134
	DRIVE CHAIN SLIDER				I	I	136
*	BRAKE SHOES WEAR	NOTE 1				I	124
	BRAKE SYSTEM			I	I	I	118
	GUARDS				I	I	133
*	CLUTCH SYSTEM			I	I	I	111
*	SUSPENSION				I	I	—
*	SPARK ARRESTER				C	C	117
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	126
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 194](#)).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.