

- 12.** Tighten the spark plug:
- If the old plug is good:
1/8 turn after it seats.
 - If installing a new plug, tighten it twice to prevent loosening:
 - a) First, tighten the plug:
NGK: 3/4 turn after it seats.
DENSO: 1/2 turn after it seats.
 - b) Then loosen the plug.
 - c) Next, tighten the plug again:
1/8 turn after it seats.

NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

- 13.** Install the parts in the reverse order of removal.
- When reinstalling the spark plug caps, take care to avoid pinching any cables or wires.
- 14.** Install the removed parts in the reverse order of removal.