


6. Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
  - Discard the oil and oil filter at an approved recycling center.

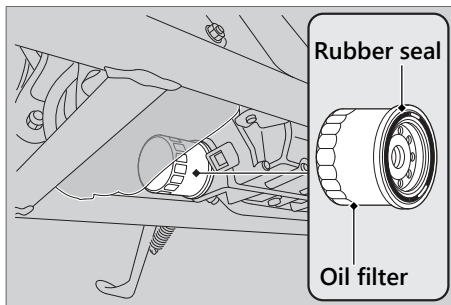

7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install the new oil filter and tighten.

**Torque:** 19 lbf-ft (26 N·m, 2.7 kgf·m)

9. Install new sealing washers onto the drain bolts. Tighten the drain bolts.

**Torque:** 22 lbf-ft (30 N·m, 3.1 kgf·m)

10. Fill the crankcase with the recommended oil (► P. 51, ► P. 134) and install the oil fill cap/dipstick.

**Required oil**

**When changing oil & engine oil filter:**

3.9 US qt (3.7 L)

**When changing oil only:**

3.7 US qt (3.5 L)

11. Check the oil level. ► P. 68
12. Check that there are no oil leaks.