

HONDA

Ref. No.	Old Part No.	New Part No.	Description	No. Req'd.		No. Used on		News No.
				I	II	From	To	
1	C3102301A	23211-027-010	SHAFT, main, transmission	1	1			
2	C3102302	23221-027-000	SHAFT, counter, transmission.....	1	1			
3	C3102307	23421-027-000	GEAR, low, transmission ...	1	1			
4	C3102308	23431-027-000	GEAR, second, transmission	1	1			
5	C3102309 A	23441-027-010	GEAR, top, transmission ...	1	1			
6	C3102317 A	23801-027-010	SPROCKET, drive	1				
	CY3102317	23801-027-810	SPROCKET, drive		1			
7	CY1102319	23811-011-810	PLATE, drive sprocket fixing.....	1				
	C1002319	23811-001-000	PLATE, drive sprocket fixing.....		1			
8	C3102326	90412-027-000	WASHER, counter shaft thrust.....	1	1			
9	C3102401	24201-027-000	PAWL, gear change.....	1	1			
10	C3102402	24205-027-000	SHAFT, gear change pawl...	1	1			
11	C3102501	28801-027-000	GEAR A, starter	1	1			
12	C3102502	28805-027-000	FRANGE, starter	1	1			
13	C3102503	28802-027-000	GEAR B, starter	1	1			
14	C3102505	28811-027-000	SHAFT, pedal.....	1	1			
15	C3102508	28820-027-000	PAWL, starter	1	1			
16	C3102509	28825-027-000	PLATE, pawl cam.....	1	1			
17	C3102510	28871-027-000	SPRING, friction	1	1			
18	C3102941	91201-027-000	OIL SEAL, 17-32-7	1	1			
19	C3104262.1	46551-027-000	KEY, woodruff, 5.5 mm.....	1	1			
20	GB6203	96100-62030	BEARING, ball, 6203	1	1			
21	BH508	92000-05008	BOLT, hex, 5×8	1				
	BH608	92000-06008	BOLT, hex, 6×8		1			