


# HOW TO USE THIS PARTS LIST

1. This Parts List is used on the Honda 50 Model PC50.
2. In each component block, parts are arranged according to the disassembly procedure except for standard parts such as bolts, nuts which are found at the bottom of the page. Therefore, this list can also be utilized as a manual for servicing as well as for placement of orders for spare parts.
3. Composition of Part Number is as follows :

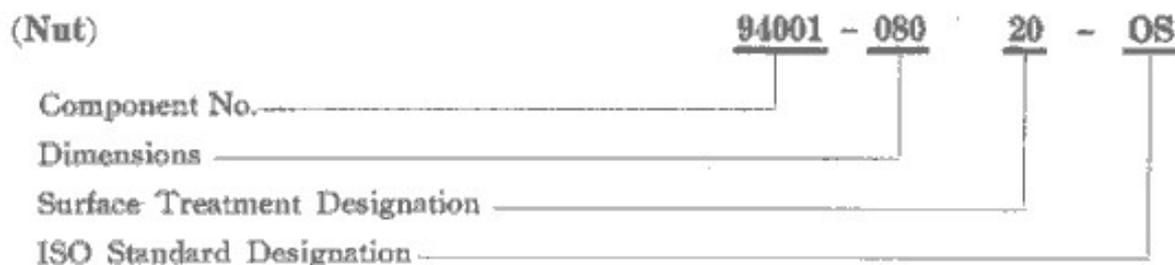

4. Announcement on parts modifications will be made with Parts News and/or Revision Sheets.
5. The figure under the heading "No. Used" indicates the number of pieces used in the respective component block.
6. Frame No. is located on the frame below the air cleaner case.
7. Dimensions are indicated in millimeters except for steel balls which are indicated in inches.