

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
1	90453-235-000	WASHER, thrust, 16 mm.....	2	PC50-1000001		
2	28806-063-010	RATCHET, starter drive.....	1	PC50-1000001		
3	28239-063-010	SPRING, friction.....	1	PC50-1000001		
4	28807-063-000	SPRING, set, starter gear.....	1	PC50-1000001		
5	90463-063-010	WASHER, 20 mm.....	1	PC50-1000001	PC50-1000419	
● 5-1	90463-063-020	WASHER, 20 mm.....	1	PC50-1000420		8008
6	28803-063-010	GEAR, starter (38T).....	1	PC50-1000001		
7	90553-706-000	WASHER, thrust, 25 mm.....	1	PC50-1000001		
8	28811-063-050	SHAFT, pedal.....	1	PC50-1000001	PC50-1000419	
● 8-1	28810-063-020	SHAFT, pedal.....	1	PC50-1000420		8008
9	28809-063-010	SHAFT, starter idle gear.....	1	PC50-1000001		
10	28808-063-010	GEAR, starter idle (22T).....	1	PC50-1000001		
11	90467-063-000	WASHER, counter.....	1	PC50-1000001		
12	90503-063-000	COLLAR, idle gear.....	1	PC50-1000001		
13	91204-063-003	OIL-SEAL, 16.26.6 (Arai).....	1	PC50-1000001		
14	94510-22000	CIR-CLIP, external, 22 mm.....	1			
15	94510-16000	CIR-CLIP, external, 16 mm.....	1			
16	94001-10000	NUT, hex., 10 mm.....	1			
17	94101-10000	WASHER, plain, 10 mm.....	1			