

Ref. No.	Part No.	Description	Reqd. No. PC50	No. Used on		News No.
				From	To	
	1 43473-063-000	NUT, rear brake adjusting .....	1	PC50-1000001	.....	
	2 42301-063-010	AXLE, rear wheel .....	1	PC50-1000001	.....	
	3 42313-063-000	COLLAR, side, rear brake panel .....	1	PC50-1000001	.....	
	4 45133-044-000	SPRING, brake show.....	1	PC50-1000001	.....	
	5 45120-063-003	SHOE, brake (Fuji) .....	2	PC50-1000001	.....	
	6 43100-063-020	PANEL, rear brake.....	1	PC50-1000001	.....	
	7 43410-063-020	ARM, rear brake .....	1	PC50-1000001	.....	
	8 43141-063-010	CAM, rear brake .....	1	PC50-1000001	.....	
	9 42311-063-010	COLLAR, rear wheel side .....	1	PC50-1000001	.....	
	10 41201-063-040	SPROCKET, final driven (31T).....	1	PC50-1000001	.....	
●	11 42603-063-000	SEAL, dust, rear wheel hub .....	1	Not applied		8003
	12 41241-063-000	DAMPER, rear wheel .....	6	PC50-1000001	.....	
	13 90752-044-000	OIL-SEAL, 17326 .....	2	PC50-1000001	.....	
	14 42620-063-010	COLLAR, distance, rear axle .....	1	PC50-1000001	.....	
	15 42601-063-020	HUB, rear wheel.....	1	PC50-1000001	.....	
	16 42711-063-003	TIRE, rear wheel (Bridgestone).....	1	PC50-1000001	.....	
	42711-063-006	TIRE, rear wheel (Nitto) .....	1	PC50-1000001	.....	
	17 44712-063-000	TUBE, wheel .....	1	PC50-1000001	.....	
	18 44713-063-000	FRAP, tire .....	1	PC50-1000001	.....	
	19 42701-063-003	RIM, rear wheel (Daido) .....	1	PC50-1000001	.....	
	20 92000-05022-0A	BOLT, hex., 5×22 .....	1	.....	.....	
	21 94001-05000-0S	NUT, hex., 5 mm .....	1	.....	.....	
	22 94001-12000-0S	NUT, hex., 12 mm .....	1	.....	.....	
	23 94511-38000	CIR-CLIP, external, 38 mm .....	1	.....	.....	
	24 96100-62010	BEARING, ball, 6201.....	1	.....	.....	
	25 96140-62010	BEARING, ball, 6201R .....	1	.....	.....	
	26 97197-212351	SPORK A, # 12×197.5 .....	18	.....	.....	
	27 97324-212341	SPORK A, # 12×197 .....	18	.....	.....	
●	28 42315-063-303	COLLAR, inner, rear wheel .....	1	PC50-1000001	.....	8003
●	29 42621-063-303	COLLAR, distance, left rear axle .....	1	PC50-1000001	.....	8003