



Part catalogue structure

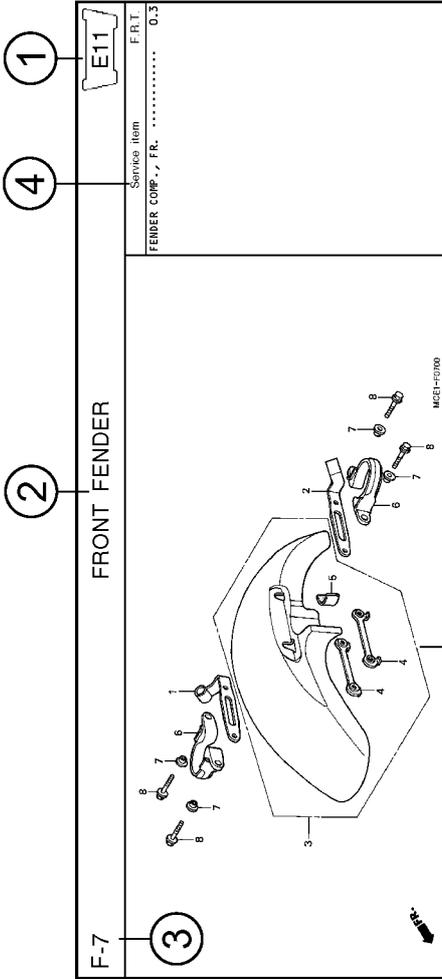

Ref. No.	Part No.	Description	Reqd. QTY CB SFX	Serial No.	Parts catalogue code
1	45156-MCE-000	CLAMPER, R. FR. BRAKE HOSE	1		
2	45157-MCE-000	CLAMPER, L. FR. BRAKE HOSE	1		
3	61100-MCE-000ZA	FENDER COMP., FR.	1	----- 3J,4J	
		*NH41TM*FORCE SILVER METALLIC	1	----- J,2J	
	61100-MCE-000ZB	*PB284C*...CANDY PHOENIX BLUE	2	----- 1008000	
4	61101-MCE-000	PLATE, FR. FENDER	2	----- 1008001	
5	61101-MCE-070	CUSHION, FR. FENDER	2		
	61102-MCE-300	(BLACK)	2		

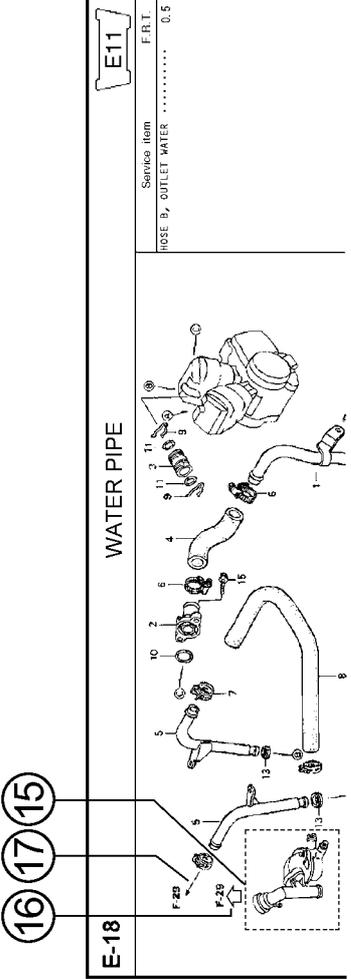

- ① **Address number**
 - Address No. is provided (in place of the page No.) to help you refer to the part with the part No. or part name.
- ② **Block title** ③ **Block number**
- ④ **Service item/Flat rate time**
- ⑤ **Reference number**
 - Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.
- ⑥ **Part number** ⑦ **Honda color code**
- ⑧ **Description**
- ⑨ **Assemblies**
 - Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)
- ⑩ **Color description**
- ⑪ **Note**
 - Notes are shown with the parentheses in the part name column.
- ⑫ **Required quantity**
 - Reqd. QTY shown in the parenthesis or parentheses indicates the optional part.
 - Reqd. QTY marked with "N" indicates the optional part that should be selected as needed.
 - Reqd. QTY indicates the number of the part used in the block.
- ⑬ **Serial number**
- ⑭ **Parts catalogue code**
 - When the parts catalogue code column is blank, it indicates that the part is applicable to all codes.
- ⑮ **Service item**
 - Parts enclosed within a dotted line are covered in a different block.
- ⑯ **Arrow**
 - A hollow arrow indicates the block No. for the parts enclosed within a dotted line .
 - A solid arrow indicates the block No. the part in question is connected to.