



Ref. No.	Part No.	Description	No. Reqd.		Remarks
			CD 125	CD 125A	
1	35350-230-000	SWITCH, stop	1	1	
2	35357-230-000	SPRING, stop switch	1	1	
3	43451-230-000	ROD, rear brake	1	1	
4	43472-250-000	PIN, brake rod joint	1	1	
5	43472-212-000	SPRING, rear brake rod	1	1	
6	45461-061-000	JOINT, front brake arm	1	1	
7	45462-028-000	NUT, front brake adjusting	1	1	
8	46500-230-020	PEDAL, brake	1	1	
9	46514-230-000	SPRING, brake pedal	1	1	
10	50500-230-020B	STAND, main (Black)	1		CD125-1012628-1014927
	50500-230-030B	STAND, main (Black)	1	1	CD125-1014928
11	50522-028-010	SPRING, main stand	1	1	
12	50523-205-000	HOOK, main stand spring	1	1	
13	50526-230-000	SHAFT, main stand pivot	1	1	
14	50530-230-000	BAR, side stand	1		
15	50542-200-000	SPRING, side stand	1		
16	50610-230-010B	BAR, step (Black)	1	1	
17	50661-230-000	RUBBER, step	2	2	
18	50664-200-000	STUD, 8x32	4	4	
19	90108-200-000	SCREW, side stand pivot	1		CD125-1012628-1113471
	90108-230-000	SCREW, side stand pivot	1		CD125-1113472
20	90512-283-000	WASHER, 19mm	1	1	
21	94001-08000	NUT, hex., 8mm	4	4	CD125-1012628-1113471
	94001-09000-0S	NUT, hex., 8mm	4	4	CD125-1113472
22	94002-10000	NUT, thin, 10mm	1	1	CD125-1012628-1113471
	94002-10000-0S	NUT, thin, 10mm	1	1	CD125-1113472
23	94101-06000	WASHER, flat, 6mm	1	1	
24	94111-08000	WASHER, spring, 8mm	1	1	
25	94201-20150	PIN, cotter, 2.0x15	1	1	
26	94201-30300	PIN, cotter, 3.0x30	1	1	