



Ref. No.	Part No.	Description	No. Reqd.		Remarks
			CD 125	CD 125A	
1	35250-230-030	( Superseded by 35250-230-043 with 93500-05024-0A )	1	1	CD125-012628~1113471
	35250-230-043	SWITCH ASSY., horn with winker .....	1	1	CD 25-1113472
2	35300-230-030	( Superseded by 35300-230-043 with 93500-05024-0A )	1		CD125-1012628~1113471
	35300-230-043	SWITCH ASSY., starter with lighting .....	1		CD125-1113472
	35300-230-623	( Superseded by 35300-230-624 with 93500-05024-0A )	1		CD125-1029146~1113471
	35300-230-624	SWITCH ASSY., starter with lighting (Used in France) .....	1		CD 25-1113472
	35300-242-030	SWITCH ASSY., starter with lighting .....	1		CD125-1063196~1113471
	35300-242-043	SWITCH ASSY., starter with lighting .....	1		CD125-1113472
	35300-242-620	( Superseded by 35300-242-621 with 93500-05024-0A )	1		CD125-1068801~1113471
	35300-242-621	SWITCH ASSY., starter with lighting (Used in France) .....	1		CD125-1113472
3	35316-230-000	KNOB, starting switch .....	1	1	
4	35316-230-000	KNOB, horn button switch .....	1	1	
5	35317-230-000	BUTTON, horn button switch push .....	2	1	
6	86918-230-000	SPRING, horn button switch ...	2	1	
7	59163-271-000	ADJUSTER, throttle grip .....	1	1	
8	88110-230-000	MIRROR, back, right .....	1	1	
9	88120-230-810	MIRROR, back, left .....	1	1	
10	93500-05024	SCREW, cross, 5x24 .....	4	4	CD125-1012628~1113471
	93500-06024-0A	SCREW, cross, 5x24 .....	6	4	CD125-1113472