

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
RELAY COMP., WINKER	49	8	SCREW, TAPPING, 4X12	69	16	STAND COMP., MAIN	73	2
RETAINER, FUEL PUMP	70	6	SCREW, TAPPING, 4X16	77	21	STATOR COMP.	33	2
RETAINER, VALVE SPRING	28	10	SCREW, TAPPING, 4X16	81	25	STAY COMP., FUEL HOSE CLAMPER	26	6
RING	65	7	SCREW, TAPPING, 4X16	59	21	STAY COMP., IGNITION COIL	31	3
RING SET, PISTON	46	2	SCREW, TAPPING, 4X16	69	17	STAY, FR. COVER	82	6
RING, BACK UP	64	5	SCREW, TAPPING, 5X12	70	17	STAY, WIRE	47	5
RING, OIL SEAL STOPPER	64	11	SCREW, TAPPING, 5X16	78	22	STEM SUB ASSY., STEERING	55	10
RING, PISTON	64	8	SCREW, TAPPING, 5X20	78	23	STEP, FLOOR	60	2
RING, SEAL	47	9	SCREW, TORX, 5X8.7	54	15	STEP, FLOOR	79	2
RING, STOP	53	19	SCREW, U-LOCK FLAT, 6X12	49	10	SUB HARNESS, BATTERY	49	1
RING, STOPPER	64	10	SEAL SET, FR. FORK	58	13	SUB HARNESS, SPEEDOMETER	68	3
ROD, TRIP	49	4	SEAL SET, PISTON	71	13	SWINGARM ASSY.	51	5
ROLLER SET, WEIGHT	38	5	SEAL, AIR CLEANER	47	4	SWITCH ASSY., DIMMER & HORN & WINKER	51	6
ROLLER, GUIDE	39	11	SEAL, BELT COVER DUCT	80	22	SWITCH ASSY., FR. STOP	51	6
RUBBER A, STAND STOPPER	73	11	SEAL, DRIVEN FACE, 34X41X4	64	13	SWITCH ASSY., HANDLE LOCK	53	1
RUBBER B, MOUNTING	80	18	SEAL, DUCT	65	1	SWITCH ASSY., SEAT OPENER	80	8
RUBBER C, SEAT SETTING	69	3	SEAL, DUST	71	3	SWITCH ASSY., SIDE STAND	80	13
RUBBER, CLUTCH DAMPER	39	6	SEAL, RR. INNER FENDER	35	5	SWITCH ASSY., STARTER & IDLE	73	1
RUBBER, LINK STOPPER	82	4	SEAL, VALVE STEM	36	9	SWITCH COMP., HANDLE LOCK	51	4
RUBBER, L. WINKER MOUNTING	75	3	SEAT B, SPRING	40	20	[T]	80	9
RUBBER, MOUNT	72	1	SEAT COMP., DOUBLE	35	6	TAILLIGHT ASSY.	76	1
RUBBER, R. WINKER MOUNTING	75	7	SEAT SET	64	7	TANK COMP., FUEL	70	5
RUBBER, SCREEN SETTING	82	5	SEAT, VALVE SPRING	70	11	TANK, RESERVE	83	2
RUBBER, SEAL	69	1	SENSOR ASSY., SPEED	28	11	TENSIONER ASSY., CAM CHAIN	30	2
[S]			SENSOR ASSY., WATER	44	11	THERMOSTAT ASSY.	32	4
SCREEN, OIL FILTER	44	7	SENSOR, OXYGEN	26	9	THREAD COMP., STEERING HEAD	55	11
SCREW-WASHER, 4X12	53	21	SENSOR, COUNTER	26	8	TIRE, FR.	66	7
SCREW-WASHER, 5X12	47	15	SHAFT, DRIVE	41	5	TIRE, RR.	67	3
SCREW-WASHER, 5X20	52	24	SHAFT, MAIN STAND	73	3	TRAY, FUEL	70	4
SCREW SET	47	1	SHAFT, MAIN STAND	41	6	TUBE, AIR BREATHER	36	11
SCREW, 6X12	63	9	SHAFT, ROCKER ARM	73	3	TUBE, AIR CLEANER CONNECTING	71	9
SCREW, BLEEDER	65	3	SHOE SET, BRAKE	28	6	TUBE, BREATHER	71	5
SCREW, FLAT, 4X16	53	20	SLEEVE, RR. BRAKE CAM	67	1	TUBE, DRAIN	44	5
SCREW, HANDLE LEVER PIVOT	52	22	SOLENOID	41	1	TUBE, MISSION BREATHER	70	9
SCREW, OPENER SET	80	8	SPACER, IGNITION COIL	47	10	TUBE, RESERVE DRAIN	41	2
SCREW, OVAL, 6X45	54	8	SPRING A, SIDE STAND	80	4	[V]	83	3
SCREW, PAN, 5X11.5	58	18	SPRING, BEARING LOCK ARM RETURN	73	12	VALVE, EX.	28	8
SCREW, PAN, 5X13	76	3	SPRING, BEARING PUSH	43	4	VALVE, IN.	28	7
SCREW, PAN, 5X13	77	19	SPRING, BRAKE LOCK ARM	67	6	VALVE, RIM	66	1
SCREW, PAN, 5X8	83	5	SPRING, CLUTCH	39	4	[W]	67	4
SCREW, PAN, 6X14	48	2	SPRING, DELAY	52	19	WASHER, 12X24X2.3	33	4
SCREW, PAN, 6X6	77	14	SPRING, DRIVEN FACE	67	6	WASHER, 12.2X29X2.5	39	16
SCREW, SPECIAL, 5MM	52	20	SPRING, FR. FORK	53	14	WASHER, 15X29X7	38	7
SCREW, TAPPET ADJUSTING	30	7	SPRING, KICK STARTER STOPPER	39	12	WASHER, 8MM	26	11
SCREW, TAPPING, 3X14	60	7	SPRING, LEVER	64	2	WASHER, DRAIN PLUG, 12MM	43	17
SCREW, TAPPING, 4X10	28	14	SPRING, MAIN STAND	53	15	WASHER, OIL BOLT	53	18
SCREW, TAPPING, 4X12	49	9	SPRING, MAIN STAND	73	4			
SCREW, TAPPING, 4X12	35	10	SPRING, OIL FILTER SCREEN	44	8			
SCREW, TAPPING, 4X12	54	14	SPRING, PAD	65	5			
SCREW, TAPPING, 4X12	58	19	SPRING, REBOUND	64	4			
SCREW, TAPPING, 4X12	59	20	SPRING, RR. BRAKE ARM	67	8			
SCREW, TAPPING, 4X12	60	13	SPRING, SEAT LOCK	69	6			
SCREW, TAPPING, 4X12	60	14	SPRING, VALVE	28	9			
SCREW, TAPPING, 4X12	63	13	SPROCKET, CAM	28	3			
SCREW, TAPPING, 4X12	63	14						

