


ENGINE GROUP

E-11


GENERATOR

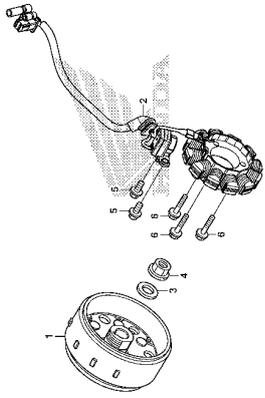

MAINTENANCE

E-12


WATER PUMP

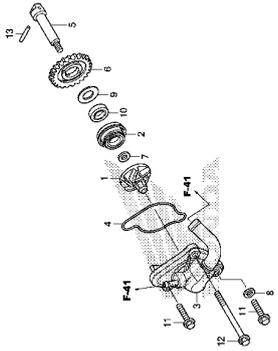

MAINTENANCE

E-13


STARTER MOTOR

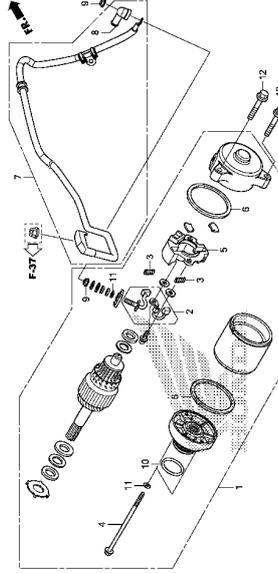

MAINTENANCE

E-14


OIL PUMP

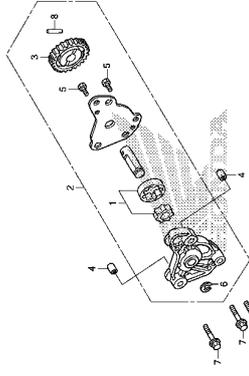

MAINTENANCE

E-15


CRANKCASE

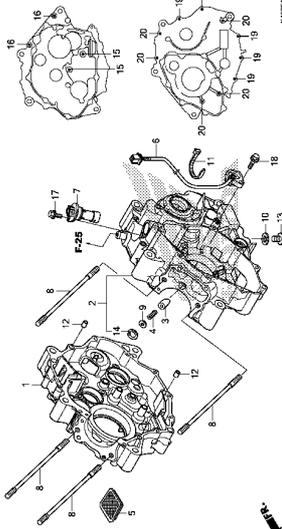

MAINTENANCE

E-16


CRANKSHAFT/PISTON

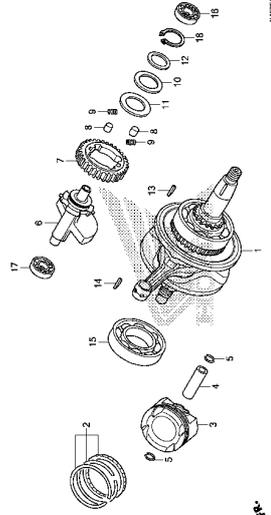

MAINTENANCE

E-17


TRANSMISSION

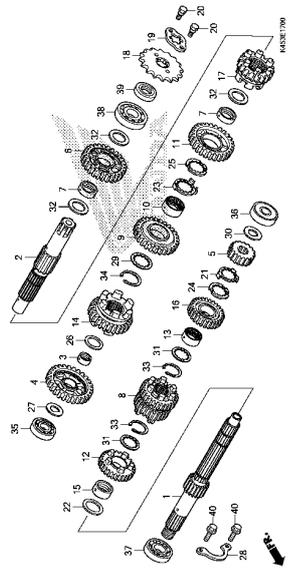

MAINTENANCE

E-19


GEARSHIFT DRUM

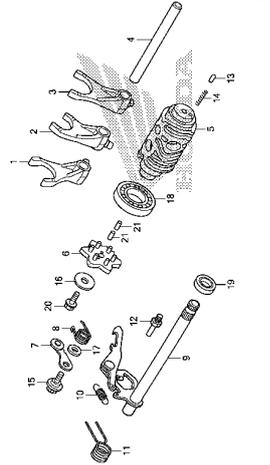

MAINTENANCE

E-23

THROTTLE BODY

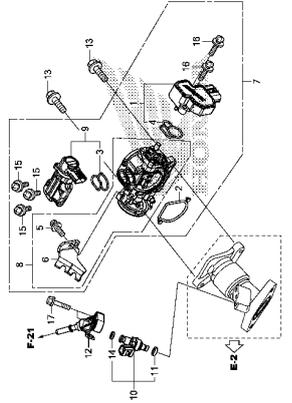

MAINTENANCE