

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
[C]			CLIP, TUBE	93	28	COVER, RESERVE TANK		
CABLE COMP. A, THROTTLE	58	1	CLIP, WIRE HARNESS, 25MM	85	9	MAINTENANCE	96	8
CABLE COMP. B, THROTTLE	58	3	COIL COMP., IGNITION	89	1	COVER, RR. MAIN PIPE	96	5
CABLE COMP., CLUTCH	58	4	COLLAR A, HANDLE SETTING	61	15	COVER, R. HANDLE TOP	60	4
CABLE COMP., SEAT LOCK	75	12	COLLAR B, HANDLE SETTING	61	16	COVER, R. MAIN PIPE SIDE	96	6
CABLE, STARTER MOTOR	45	7	COLLAR, 6.2X11	93	27	COVER, R. PIVOT	96	1
CALIPER SUB ASSY., RR.	70	6	COLLAR, 8.5X7	78	16	COVER, SEAT LOCK KEY	84	8
CALIPER SUB ASSY., R. FR.	65	13	COLLAR, FR. AXLE DISTANCE	66	5	COVER, STARTER MOTOR TERMINAL ..	45	8
CAMSHAFT COMP., EX.	34	3	COLLAR, FR. FENDER	87	9	COVER, TAILLIGHT	76	5
CAMSHAFT COMP., IN.	34	2	COLLAR, FR. WHEEL SIDE	66	4	COVER, TAIL CAP	78	4
CAP ASSY., NOISE SUPPRESSOR ..	89	3	COLLAR, FR. WHEEL SIDE	66	4	COVER, THERMOSTAT	92	19
CAP COMP., RADIATOR	92	6	COLLAR, HORN SETTING	89	13	CRANKCASE COMP., R.	47	1
CAP, 14MM	42	5	COLLAR, KICK SPRING	53	8	CRANKCASE SET, L.	47	2
CAP, 30MM	42	6	COLLAR, L. RR. WHEEL SIDE	71	5	CRANKSHAFT COMP.	48	1
CAP, BLEEDER	65	4	COLLAR, MOUNTING	84	10	CUP COMP., OIL	68	6
	70	11	COLLAR, MUFFLER MOUNTING	78	9	CUSHION ASSY., RR.	83	1
CAP, CHANGE SWITCH CONTACT ...	52	13	COLLAR, RR. AXLE DISTANCE	71	8	CYLINDER COMP.	38	1
CAP, DUMMY	89	9	COLLAR, RR. WHEEL SIDE	71	6	CYLINDER SET, MASTER	59	11
CAP, FUEL FILLER	74	10	COLLAR, SIDE COVER SETTING	84	16	CYLINDER SUB ASSY., FR. BRAKE		
CAP, LOCK NUT	57	2	COLLAR, SPLINE, 17X20X11	50	13	MASTER	59	5
CAP, MASTER CYLINDER	59	7	COLLAR, STARTER REDUCTION	41	5	CYLINDER SUB ASSY., RR. BRAKE		
	68	8	COLLAR, SWINGARM PIVOT	82	10	MASTER	68	5
CAP, RESERVE TANK	92	13	COLLAR, WATER PASS, 13X8	39	1			
CAP, SWINGARM END	82	5	CONNECTOR, MASTER CYLINDER ...	68	3	[D]		
CASE ASSY., UNDER	56	5	CONTACT ASSY., CHANGE SWITCH ..	47	7	DAMPER SET, WHEEL	71	1
CASE COMP., L. FR. BOTTOM	64	14	CORD COMP., OXYGEN SENSOR	78	11	DIAPHRAGM	59	9
CASE COMP., R. FR. BOTTOM	64	6	CORD COMP., RR. COMBINATION				68	12
CASE COMP., THERMOSTAT	92	18	LIGHT	87	6	DISK, CLUTCH FRICTION	40	4
CASE SUB ASSY., AIR CLEANER ..	77	6	COTTER, VALVE	34	13	DISK, FR. BRAKE	66	8
CASE, DRIVE CHAIN	82	1	COUNTERSHAFT	50	2	DISK, RR. BRAKE	71	13
CATCH COMP., SEAT	75	8	COVER ASSY., BATTERY	88	6	DOWEL PIN, 10X12	33	21
CENTER, CLUTCH	40	3	COVER B, CHANGE PEDAL	79	20		38	3
CHAIN, CAM	37	1	COVER COMP., LICENSE	84	3	DOWEL PIN, 8X12	42	7
CHAIN, DRIVE	82	2	COVER COMP., L. RR.	42	2		46	4
CIRCLIP	68	14	COVER COMP., R. CRANKCASE	39	2		47	12
CIRCLIP, 17MM	51	33	COVER COMP., WATER PUMP	44	3	DOWEL PIN, 8X14	32	16
CIRCLIP, EXTERNAL, 28MM	49	18	COVER SET, FR.	94	1	DOWEL PIN, 8X16	39	11
CIRCLIP, INTERNAL, 12MM	47	14	COVER SET, FR. TOP	95	19	DRIVER, SCREW	97	4
CIRCLIP, INTERNAL, 18.8	59	16	COVER SET, L. HANDLE TOP	60	5	DRUM, GEARSHIFT	52	5
CIRCLIP, INTERNAL, 22MM	39	17	COVER SET, L. RR. BODY	76	2	DUCT, INLET	77	8
CLAMPER COMP., FR. BRAKE HOSE	62	3	COVER SET, L. SIDE	94	8	DUST SEAL	64	18
CLAMPER, FR. BRAKE HOSE	59	3	COVER SET, RR. HANDLE	60	6	DUST SEAL, 21X37X7	67	12
CLAMPER, RR. BRAKE HOSE	68	1	COVER SET, R. RR. BODY	76	1	DUST SEAL, STEERING HEAD	62	9
CLAMP, MASTER CYLINDER OIL			COVER SET, R. SIDE	94	6			
HOSE	68	9	COVER SET, TAIL	76	4	[E]		
CLAMP, TUBE	77	15	COVER SUB ASSY., AIR CLEANER ..	77	7	ELEMENT COMP., AIR CLEANER	77	2
			COVER, BATTERY MAINTENANCE ...	96	2	EMBLEM	101	28
			COVER, CHANGE PEDAL	79	5	EMBLEM, PRODUCT	60	9
			COVER, COUPLER	91	9	E-RING, 6MM	46	6
CLAMP, WATER HOSE	92	21	COVER, CYLINDER HEAD	31	1			
CLIP B, BREATHER TUBE	77	1	COVER, FR. HANDLE	60	3	[F]		
CLIP, BUMPER SEAL	94	11	COVER, FR. MAIN PIPE	96	4	FAN COMP., COOLING	92	4
	96	12	COVER, FR. TOP	94	2	FENDER A, FR.	63	1
CLIP, KICK STARTER ARM	79	7	COVER, FUEL PUMP	74	9	FENDER B, FR.	63	2
CLIP, PISTON PIN, 14MM	48	5	COVER, LOWER	94	7	FENDER B, RR.	84	12
CLIP, SNAP FITTING	61	17	COVER, L. CRANKCASE	42	1	FENDER SET A, FR.	63	8
	76	7	COVER, L. MAIN PIPE SIDE	96	7			
	95	14	COVER, L. PIVOT	96	3			
CLIP, SWITCH COVER	79	16	COVER, O2 SENSOR	78	12			

