


F-37

BATTERY

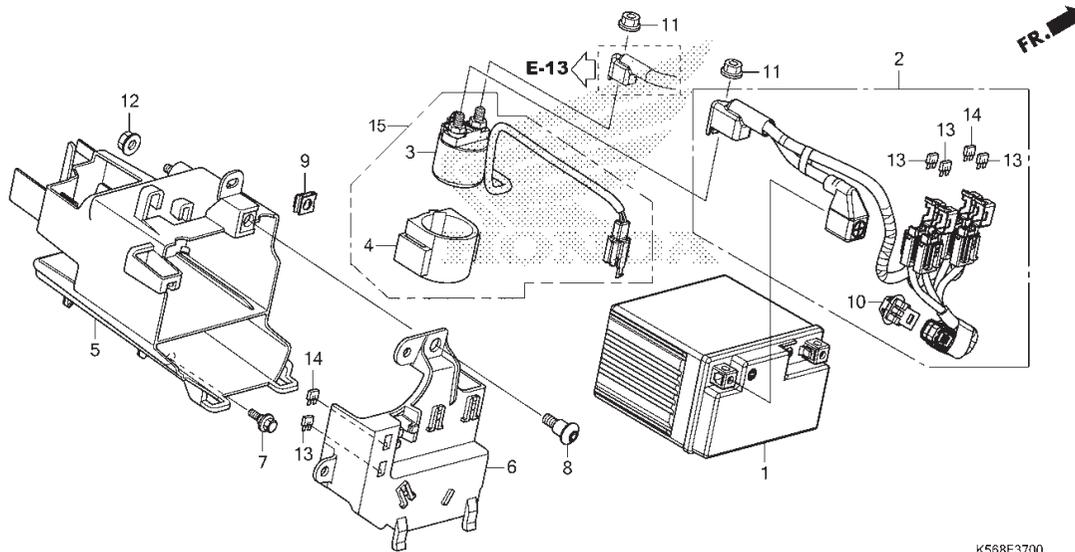

K568F3700

No. Ref.	L.O.N.	(Nomor ref. relatif) Deskripsi	F.R.T.
1	610100	BATTERY.....	0,2
2	6111F8	SUB HARNESS, BATTERY.....	0,6
3	615113	SWITCH, STARTER MAGNETIC.....	0,7
5	410185	BOX, BATTERY.....	0,7

No. Ref.	No. Part	Deskripsi	Jumlah SONIC 150R (FS150R) 2015(G)	No. Seri	Kode Parts Catalog
1	31500-KZR-601	BATTERY(YTZ6V)	1		
	31500-KZR-602	BATTERY(GTZ6V)	1		
2	32103-K56-N00	SUB HARNESS, BATTERY	1		
3	35850-K56-N01	SWITCH ASSY., STARTER MAGNETIC ..	1		
4	35856-K56-N00	RUBBER, SHOCK(MAGNETIC)	1		
5	50320-K56-N00	BOX COMP., BATTERY	1		
6	50330-K56-N00	COVER ASSY., BATTERY	1		
7	90116-KVB-900	BOLT, FLANGE, 6MM	1		
8	90132-K45-N00	SCREW, PAN, 6X17	1		
9	90305-GK8-000	NUT, CLIP, 6MM	1		
10	91565-S0X-003	CLIP, COUPLER(DARK GREEN)	1		
11	94050-0600	NUT, FLANGE, 6MM	2		
12	94050-06081	NUT, FLANGE, 6MM	1		
13	98200-41001	FUSE, MINI(10A)	4		
14	98200-42000	FUSE, MINI(20A)	2		
15	35860-K56-N00	SET, START MAG	1		

