



Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
15	113180	CARTRIDGE, OIL FILTER .....	0.2
16	1131B5	SCREEN, OIL FILTER .....	1.4
17	617198	SENSOR, SPEEDOMETER .....	1.2
18	6111A3	SUB CORD, SPEED SENSOR .....	1.2
19	615160	SWITCH, OIL PRESSURE .....	0.2
20	617197	SENSOR, WHEEL SPEED :REAR ....	1.3
28	2101F0	BEARING, DRIVESHAFT :LEFT ....	1.6
	2101J1	BEARING, DRIVESHAFT :BOTH ....	1.7
29	2101E5	BEARING, FINAL GEAR SHAFT :LEFT .....	1.5
	2101J0	BEARING, FINAL GEAR SHAFT :BOTH .....	1.6
30	2101C7	BEARING, COUNTERSHAFT :LEFT ..	1.5
	2101C9	BEARING, COUNTERSHAFT :BOTH ..	1.6
31	110131	OIL SEAL, CRANKSHAFT :LEFT ...	4.9
		.INCLUDES: Engine removal and installation	
32	2101E7	OIL SEAL, DRIVESHAFT .....	1.6

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			NSS 300 D	NSS 300A D		
(9)	13324-KTW-901	BEARING C, CRANKSHAFT L. SIDE (BROWN)	2	2		
	13325-KTW-901	BEARING D, CRANKSHAFT L. SIDE (GREEN)	2	2		
	13326-KTW-901	BEARING E, CRANKSHAFT L. SIDE (BLUE/BLUE) (O.S.)	(2)	(2)		
	13327-KTW-901	BEARING F, CRANKSHAFT L. SIDE (BLACK/BLACK) (O.S.)	(2)	(2)		
	13328-KTW-901	BEARING G, CRANKSHAFT L. SIDE (BROWN/BROWN) (O.S.)	(2)	(2)		
	13329-KTW-901	BEARING H, CRANKSHAFT L. SIDE (GREEN/GREEN) (O.S.)	(2)	(2)		
10	15153-HN7-000	STRAINER, OIL .....	1	1		
11	15155-300-000	COLLAR, O-RING .....	3	3		
12	15155-HP0-A00	COLLAR, O-RING .....	2	2		
13	15220-KTW-900	VALVE ASSY., RELIEF .....	1	1		
14	15231-413-020	VALVE, RELIEF .....	1	1		
15	15410-MFJ-D01	CARTRIDGE, OIL FILTER (TOYO ROKI)	1	1		
16	15421-K04-930	SCREEN, OIL FILTER .....	1	1		
17	28810-R90-013	PICK UP ASSY. (TOYO) .....	1	1		
18	32105-K04-930	SUB CORD, ENGINE .....	1	-		
19	35500-MEH-661	SWITCH ASSY., OIL PRESSURE (DENSO)	1	1		
20	38510-K04-971	SENSOR, RR. WHEEL SPEED .....	-	1		