


BRAKE PEDAL HEIGHT ADJUSTMENT

Loosen the lock nut and turn the push rod until the correct pedal height is obtained.

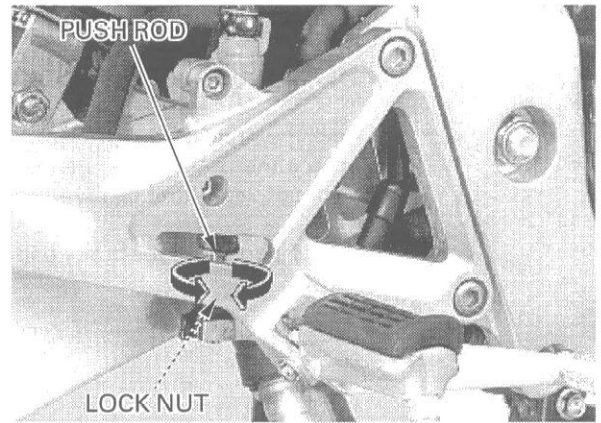

BRAKE LIGHT SWITCH


NOTE:

The front brake light switch does not require adjustment.

Adjust the rear brake light switch so that the brake light comes on just prior to the brake actually being engaged.

If the light fails to come on, adjust the switch so that the light comes on at the proper time.

Hold the switch body and turn the adjuster. Do not turn the switch body.

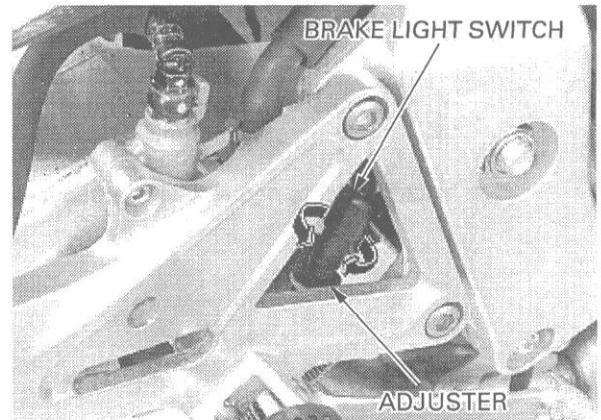

HEADLIGHT AIM

▲WARNING

An improperly adjusted headlight may blind on-coming drivers, or it may fail to light the road for a safe distance.

NOTE:

Adjust the headlight beam as specified by local laws and regulations.



Place the motorcycle on a level surface.

Adjust the headlight beam horizontally. Beam adjustment are made using the horizontal beam adjusting screw.

A clockwise rotation moves the beam toward the right side of the rider.

Adjust the headlight beam vertically by move the headlight case assembly.

Remove the rubber plugs from the headlight case mounting bolts.

Loosen the headlight case mounting bolts and adjust the vertical beam by moving the headlight case assembly.

