

Check the action of the shock absorber by compressing it several times.
 Check the entire shock absorber assembly for signs of leaks, damage or loose fasteners.
 Replace damaged components which cannot be repaired.
 Tighten all nuts and bolts.

Refer to section 14 for shock absorber service.



NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-13).
 Check that all safety clips, hose clamps and cable stays are in place and properly secured.

WHEELS/TIRES

NOTE:

Tire pressure should be checked when the tires are COLD.

RECOMMENDED TIRE PRESSURE AND TIRE SIZE:

		FRONT	REAR
Tire pressure kPa (kgf/cm ² , psi)		250 (2.50 , 36)	290 (2.90 , 42)
Tire size		130/70ZR16 (61W)	180/55ZR17 (73W)
Tire brand	Bridgestone	BT-50F RADIAL G	BT-50R RADIAL G
	Michelin	TX11	TX23

