

# 5. FUEL SYSTEM

SERVICE INFORMATION	5-1	CARBURETOR ASSEMBLY	5-15
TROUBLESHOOTING	5-3	CARBURETOR COMBINATION	5-20
AIR CLEANER HOUSING	5-4	CARBURETOR INSTALLATION	5-24
CARBURETOR REMOVAL	5-8	PILOT SCREW ADJUSTMENT	5-25
CARBURETOR SEPARATION	5-9	SECONDARY AIR SUPPLY SYSTEM	5-26
CARBURETOR DISASSEMBLY	5-11	FUEL VALVE	5-28

5

## SERVICE INFORMATION

### GENERAL

#### ▲WARNING

- *Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.*
- *Bending or twisting the control cables will impair smooth operation and could cause the cable to stick or bind, resulting in loss of vehicle control.*

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

#### CAUTION:

*Be sure to remove the diaphragms before cleaning air and fuel passages with compressed air. The diaphragms might be damaged.*

- Refer to section 2 for fuel tank removal and installation.
- When disassembling fuel system parts, note the location of the O-rings. Replace them with new ones on reassembly.
- Before disassembling the carburetor, place the suitable container under the carburetor drain tube. Loosen the bolt and drain the carburetor.
- After removing the carburetor, wrap the intake ports of the engine with a shop towel or cover it with piece of tape to prevent any foreign material from dropping into the engine.
- The vacuum chamber and float chamber can be serviced with the carburetors assembled.

#### NOTE:

If the vehicle is to be stored for more than one month, drain the float bowls. Fuel left in the float bowls may cause clogged jets, resulting in hard starting or poor driveability.