



# STATOR

## REMOVAL

Remove the alternator wire grommet from the alternator cover.  
 Remove the socket bolt and stator wire holder.  
 Remove the socket bolts and stator.

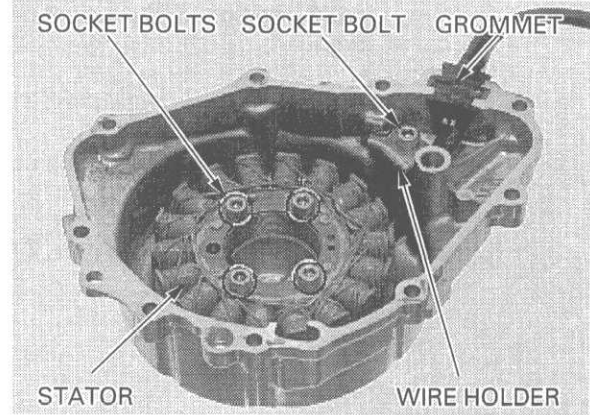

## INSTALLATION

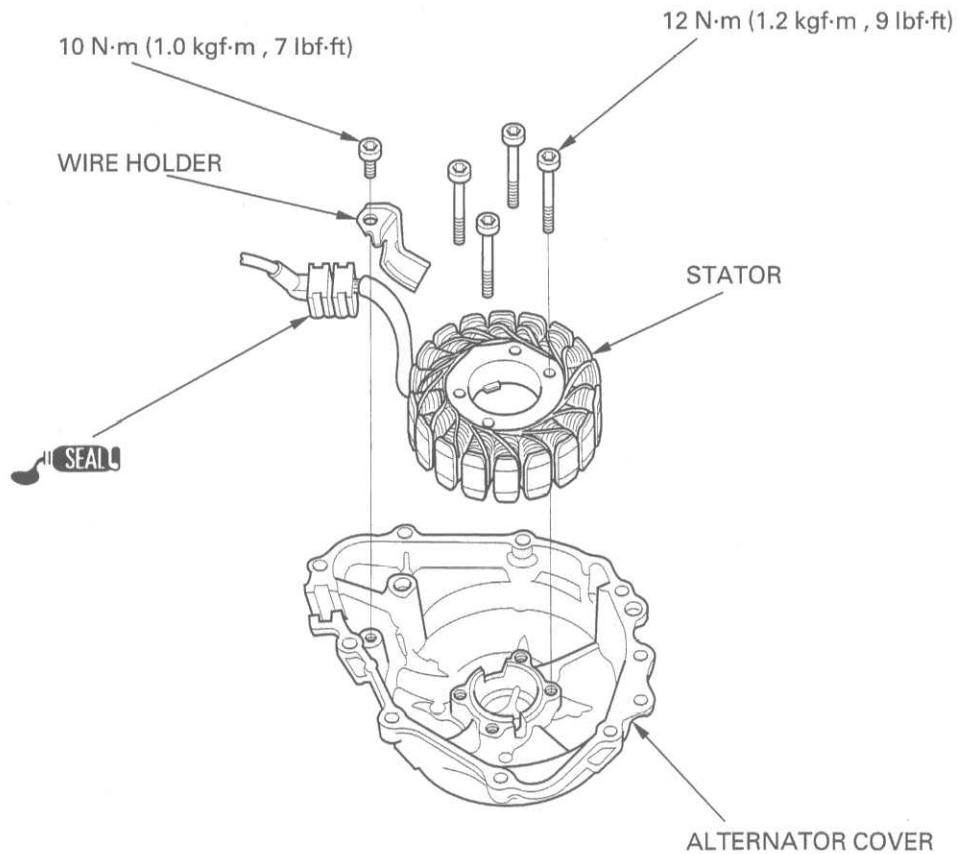

Install the stator into the alternator cover.

Apply sealant to the wire grommet, then install the wire grommet into the alternator cover groove securely.

