



FRONT WHEEL/SUSPENSION/STEERING


Disconnect the throttle cable ends from the throttle pipe and remove the right handlebar switch/throttle housing.

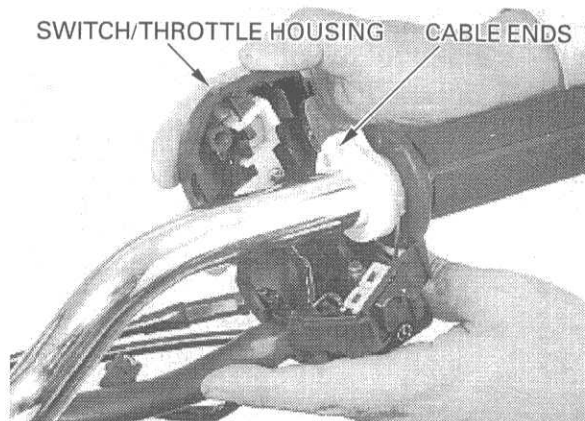

Remove the screw and the handlebar weight.

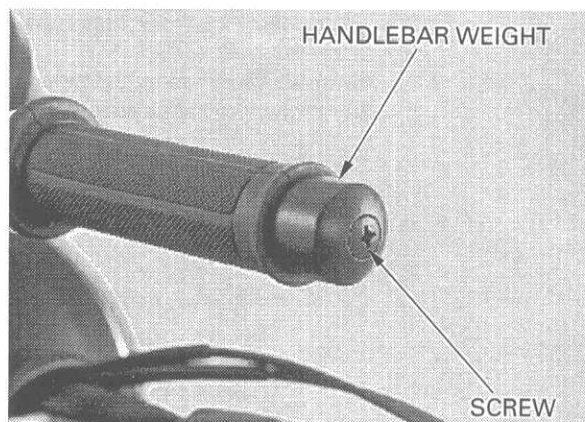

Disconnect the clutch switch wire connectors from the switch. Remove the clutch lever bracket holder bolts, holder and clutch lever bracket assembly.

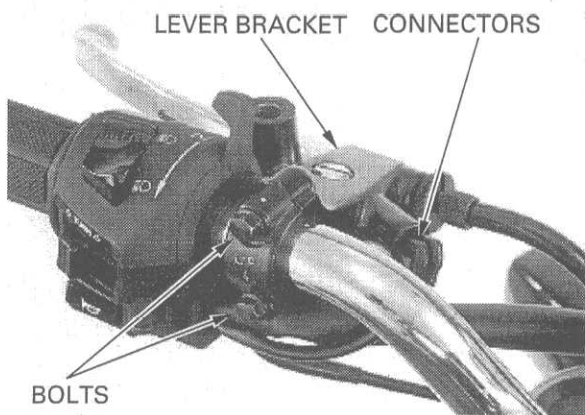

Remove the left handlebar switch screws.

