

REAR WHEEL/SUSPENSION

TOOLS

Bearing remover shaft	07746-0050100
Bearing remover head, 17 mm	07746-0050500
Driver	07749-0010000
Attachment, 32 × 35 mm	07746-0010100
Attachment, 42 × 47 mm	07746-0010300
Attachment, 52 × 55 mm	07746-0010400
Pilot, 15 mm	07746-0040300
Pilot, 17 mm	07746-0040400
Pilot, 22 mm	07746-0041000
Attachment, 28 × 30 mm	07946-1870100
Driver shaft	07946-MJ00100
Needle bearing remover attachment	07GMD-KT70200
Needle bearing remover	07LMC-KV30100

TROUBLESHOOTING

Soft suspension

- Weak shock absorber spring
- Incorrect suspension adjustment
- Oil leakage from damper unit
- Tire pressure too low

Hard suspension

- Damaged shock absorber mounting bearing
- Bent damper rod
- Damaged swingarm pivot bearings
- Bent swingarm pivot
- Incorrect suspension adjustment
- Tire pressure too high

Steers to one side or does not track straight

- Bent rear axle
- Axle alignment/chain adjustment not equal on both sides

Rear wheel wobbling

- Bent rim
- Worn rear wheel bearings
- Faulty tire
- Unbalanced tire and wheel
- Tire pressure too low
- Faulty swingarm pivot bearings