



REAR WHEEL/SUSPENSION

Install the axle washer with its "F" mark facing forward.
Install the axle from the left side.

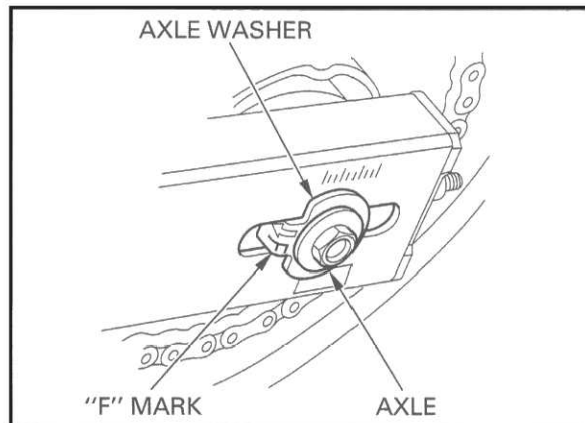


Install the axle washer with its "F" mark facing forward.
Install the plain washer and loosely install the axle nut.

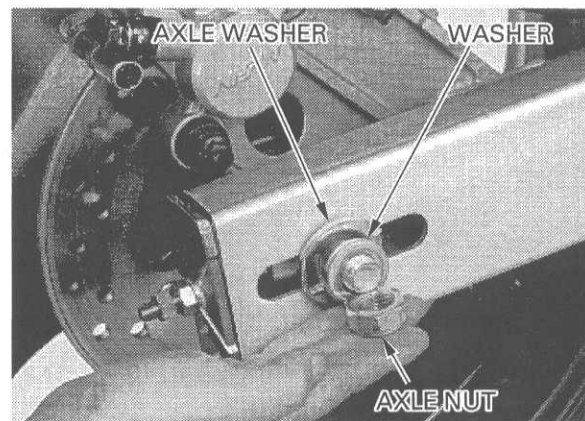

Adjust the drive chain slack (page 3-17).

Tighten the axle nut to the specified torque.

TORQUE: 88 N·m (9.0 kgf·m , 65 lbf·ft)

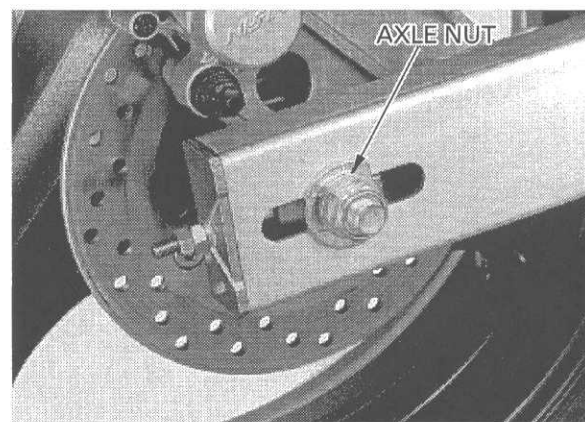

SHOCK ABSORBER

REMOVAL

Support the motorcycle securely using a hoist or equivalent.

Remove the following:

- Rear wheel (page 14-3)
- Side covers (page 2-2)

Remove the shock absorber lower mounting bolt/nut.

