


Coat the new piston seal with clean brake fluid.
Coat the new dust seal with silicone grease.


Install the piston seal and dust seal into the groove of the caliper body.

Coat the caliper piston with clean brake fluid and install it into the caliper cylinder with its opening end toward the pad.

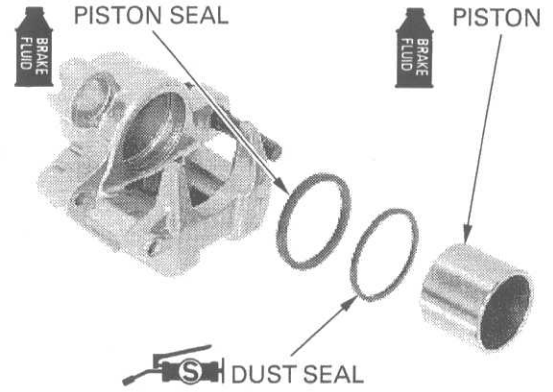

If the caliper and bracket pin boots are hard or deteriorated, replace them with new ones.


Install the pad retainer and caliper pin boot into the caliper bracket.

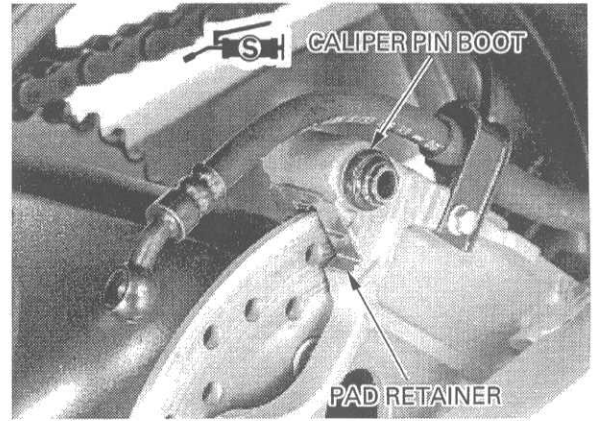

Install the pad spring into the caliper body.

Apply silicone grease to the inside of the bracket pin boot.

Install the bracket pin boot and sleeve into the caliper.

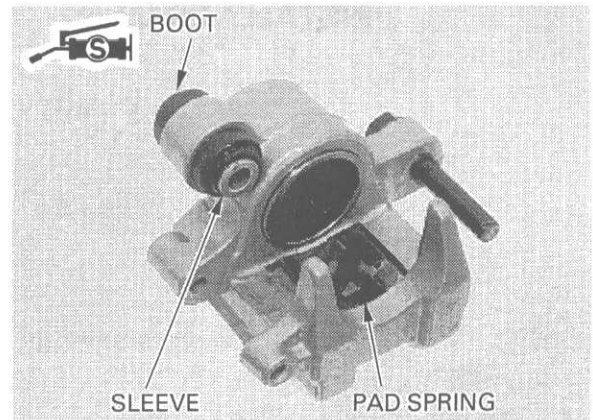

INSTALLATION

Apply silicone grease to the caliper pin and install the caliper onto the bracket.

Install and tighten the new rear brake caliper mounting bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m , 17 lbf·ft)

Install the brake hose eyelet to the caliper body with two new sealing washers and oil bolt.

Push the brake hose eyelet to the stopper on the caliper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

Install the brake pads (page 15-7).

Fill and bleed the rear brake hydraulic system (page 15-3).

