

### REMOVAL/INSTALLATION

Disconnect the regulator/rectifier 3P (Natural) connector.

Remove the regulator/rectifier unit mounting bolts, ground eyelet and regulator/rectifier.

Install the regulator/rectifier unit in the reverse order of removal.

