

# HEADLIGHT

## BULB REPLACEMENT

### ▲WARNING

*A halogen headlight bulb becomes very hot while the headlight is ON, and remains hot for a while after it is turned OFF. Be sure to let it cool down before servicing.*

Remove the screws and headlight unit.

Remove the headlight bulb socket and dust cover. Unhook the bulb retainer and remove the headlight bulb.

### CAUTION:

*Avoid touching halogen headlight bulb. Finger prints can create hot spots that cause a bulb to break.*

If you touch the bulb with your bare hands, clean it with cloth moistened with denatured alcohol to prevent early bulb failure.

Install a new bulb into the headlight unit.

Install the headlight bulb aligning its tabs with the grooves in the headlight unit. Hook the bulb retainer.

Install the dust cover tightly against the headlight with its "TOP" mark facing up.

Connect the headlight socket.

Install the headlight unit and tighten the screws securely.

