

SERVICE INFORMATION		TRUBLESHOOTING	
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1	(REAR WHEEL/SUSPENSION)	14-2
(FRONT WHEEL/SUSPENSION/STEERING)	13-1	TURN SIGNAL	19-4
(FUEL SYSTEM)	5-1	TURN SIGNAL RELAY	19-17
(HYDRAULIC BRAKE)	15-2	VALVE CLEARANCE	3-7
(IGNITION SYSTEM)	17-1	VALVE GUIDE REPLACEMENT	8-14
(LIGHTS/METERS/SWITCHES)	19-1	VALVE SEAT INSPECTION/REFACING	8-15
(LUBRICATION SYSTEM)	4-1	WATER PUMP	6-14
(MAINTENANCE)	3-1	WHEELS/TIRES	3-27
(REAR WHEEL/SUSPENSION)	14-1	WIRING DIAGRAMS	20-1
SHOCK ABSORBER	14-10		
SIDE COVER	2-2		
SIDE STAND	3-25		
SIDE STAND SWITCH	19-16		
SPARK PLUG	3-5		
SPECIFICATIONS	1-4		
STARTER CLUTCH	10-5		
STARTER MOTOR	18-4		
STARTER RELAY SWITCH	18-10		
STATOR	10-3		
STEERING HEAD BEARINGS	3-28		
STEERING STEM	13-25		
SUSPENSION	3-26		
SWINGARM	14-12		
SYSTEM DIAGRAM			
(BATTERY/CHARGING SYSTEM)	16-0		
(ELECTRIC STARTER)	18-0		
(IGNITION SYSTEM)	17-0		
SYSTEM FLOW PATTERN	6-0		
SYSTEM LOCATION	19-0		
SYSTEM TESTING	6-3		
TACHOMETER	19-9		
TAIL/BRAKE LIGHT	19-5		
THERMOSTAT	6-6		
THROTTLE OPERATION	3-5		
THROTTLE SENSOR	17-10		
TORQUE VALUES	1-13		
TOOLS	1-17		
TRANSMISSION	12-7		
TRUBLESHOOTING			
(ALTERNATOR/STARTER CLUTCH)	10-1		
(BATTERY/CHARGING SYSTEM)	16-3		
(CLUTCH/GEARSHIFT LINKAGE)	9-2		
(COOLING SYSTEM)	6-2		
(CRANKCASE/PISTON/CYLINDER)	11-2		
(CRANKSHAFT/TRANSMISSION)	12-2		
(CYLINDER HEAD/VALVES)	8-3		
(ELECTRIC STARTER)	18-2		
(ENGINE DOES NOT START OR IS HARD TO START)	22-1		
(ENGINE LACKS POWER)	22-2		
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1		
(FRONT WHEEL/SUSPENSION/STEERING)	13-2		
(FUEL SYSTEM)	5-3		
(HYDRAULIC BRAKE)	15-3		
(IGNITION SYSTEM)	17-3		
(LUBRICATION SYSTEM)	4-2		
(POOR HANDLING)	22-4		
(POOR PERFORMANCE AT HIGH SPEED)	22-4		
(POOR PERFORMANCE AT LOW AND IDLE SPEED)	22-3		