


Throttle grip free play can be adjusted at either end of the throttle cable.


Minor adjustments are made with the upper adjuster. Adjust the free play by loosening the lock nut and turning the adjuster.

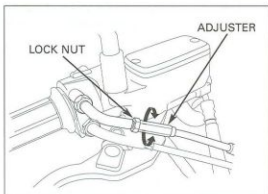

Major adjustments are made with the lower adjuster.

Open and support the front end of the fuel tank (page 3-4).


Adjust the free play by loosening the lock nut and turning the adjuster. After adjustment, tighten the lock nut securely. Recheck the throttle operation. Replace any damaged parts, if necessary.

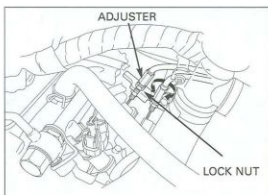

## CHOKE OPERATION

Check for smooth opening and closing of the choke knob.  
Check the choke cable and replace them if they are deteriorated, kinked or damaged.

Lubricate the choke cable, if throttle operation is not smooth.

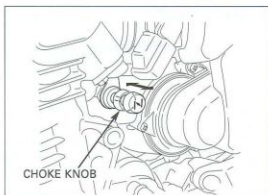

## AIR CLEANER

Remove the left side cover (page 2-2).

Disconnect the variable intake air control vacuum tube from the air cleaner housing cover. Remove the screws and air cleaner housing cover. Remove and check the air cleaner element in accordance with the maintenance schedule (page 3-3).

