



Turn the ignition switch ON.
Measure the voltage between the ECT sensor connector terminal of the wire harness side and ground.



Connection: Pink/White (+) – Ground (-)
Standard: 4.75 – 5.25 V

Out of range →

- Open or short circuit in Pink and Pink/White wire
- Loose or poor contacts on the ECM connector



Voltage exists

Measure the voltage at the ECT sensor connector of the wire harness side.



Connection: Pink/White (+) – Green/Orange (-)
Standard: 4.75 – 5.25 V

Out of range →

- Open or short circuit in Green/Orange wire
- Loose or poor contacts on the ECM connector

Voltage exists →

- Replace the ECM with a new one, and inspect it again