



Connect the fuel hose to the fuel pump with new sealing washers.

Install and tighten the fuel hose banjo bolt to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

Connect the fuel return hose to the fuel pump.



Align the fuel hose eyelet joint with the stopper on the fuel pump.

Install the fuel tank onto the frame.
Loosely install the fuel tank mounting bolt/nut.

Support the front end of the fuel tank.

