


FUEL SYSTEM (Programmed Fuel Injection)

Connect the vacuum tube to the one-way valve.

Connect the crankcase breather tube to the air cleaner housing.

Connect the PAIR control valve air suction tube and intake vacuum tubes to the air cleaner housing.

Connect the MAP sensor connector and vacuum tube.

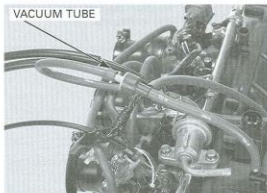

INSTALLATION

Install the air cleaner housing/throttle body from the left side of the frame.

Tighten the cylinder head side insulator band so that the insulator band distance is 4 ± 1 mm (0.2 ± 0.04 in).


4 ± 1 mm (0.2 ± 0.04 in)



Install the IAT sensor 2P connector.

Install the air cleaner housing mounting bolt.

2P CONNECTOR

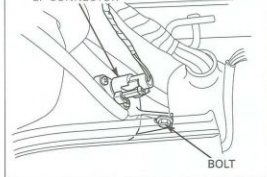

Install and tighten the by-starter valve knob stay bolt.

