



CLUTCH/GEARSHIFT LINKAGE

CLUTCH LIFTER LEVER

Remove the clutch lifter lever, return spring and washer from the right crankcase cover.

Check the lifter lever spindle for wear or damage.
Check the return spring for fatigue or damage.

Check the lifter lever oil seal and needle bearings for wear or damage.
Install the clutch lifter lever with the washer and spring in the reverse order of removal.

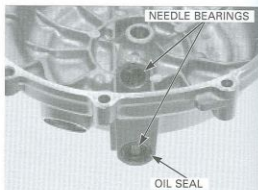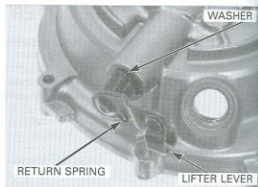

CLUTCH

REMOVAL

Remove the right crankcase cover (page 9-3).

Remove the clutch spring bolts, springs and pressure plate.

Remove the clutch lifter piece from the lifter bearing.

Remove the following:

- Clutch discs
- Clutch plates
- Spring seat
- Judder spring

