


*The alternator cover (stator) is magnetically attached to the flywheel, be careful during installation.*

Install the alternator cover.

Install and tighten the bolts securely.

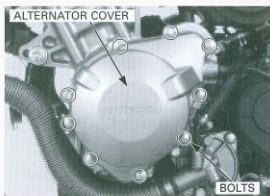

Connect the alternator 3P (Natural) connector.

Install the left side cover (page 2-2)

