



Loosen the top bridge pinch bolts.



When the fork leg will be disassembled, loosen the fork bolt, but do not remove it yet.

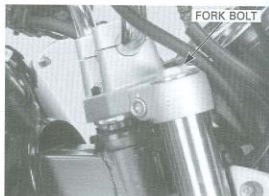

Loosen the fork bottom pinch bolts and remove the fork tube from the fork top bridge and steering stem.

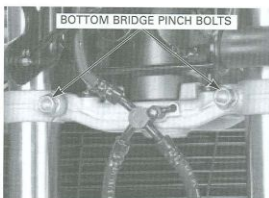

Be careful not to scratch the fork tube or damage the dust seal.

DISASSEMBLY

Remove the fork protector by prying it carefully using a screwdriver.

