



Remove the turn signal light bracket from the steering stem.

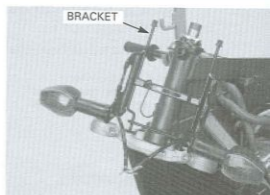

Straighten the tabs of the lock washer.

Remove the lock washer and lock nut.

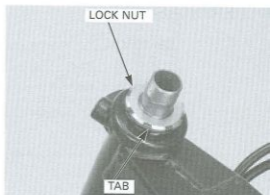

Remove the steering stem bearing adjusting nut using the special tool.

TOOL:

Steering stem socket

07916-3710101



Remove the following:

- Dust seal
- Upper bearing inner race
- Upper bearing

