

REAR WHEEL/SUSPENSION


Install the driven flange assembly into the left wheel hub.

TORQUE: 108 N·m (11.0kgf·m, 80 lbf·ft)



Install the brake disc with its rotating direction mark facing out. Install and tighten the new bolts to the specified torque.


TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)

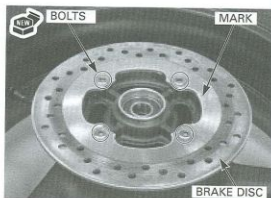

WHEEL BALANCE

The wheel balance must be checked when the tire is remounted.

For optimum balance, the tire balance mark (a paint dot on the side wall) must be located next to the valve stem. Remount the tire if necessary.

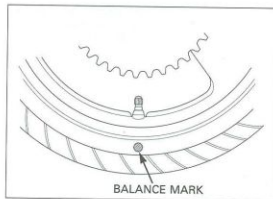

Note the rotating direction marks on the wheel and tire.

