


## HYDRAULIC BRAKE

Apply silicon grease to the boot inside.  
Install the boot.



Install the brake light switch and tighten the screw to the specified torque.


**TORQUE: 1 N·m (0.1 kgf·m, 0.7 lbf·ft)**

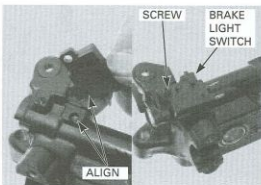

Apply silicone grease to the contact surfaces of the brake lever and piston tip.

Install the brake lever assembly, tighten the pivot bolt to the specified torque.

**TORQUE: 1 N·m (0.1 kgf·m, 0.7 lbf·ft)**

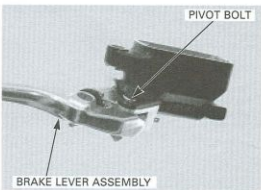

Hold the pivot bolt and tighten the pivot nut to the specified torque.

**TORQUE: 6 N·m (0.6 kgf·m, 4.3 lbf·ft)**

