

## BATTERY

## REMOVAL/INSTALLATION

Always turn the ignition switch OFF before removing the battery.

Remove the side cover (page 2-2).

Disconnect the battery band and pull out the battery from the battery case.

Disconnect the negative cable and then the positive cable, and remove the battery.

Install the battery in the reverse order of removal. After installing the battery, coat the terminals with clean grease.

Install the side cover (page 2-2).

Connect the positive terminal first and then the negative cable.

## VOLTAGE INSPECTION

Measure the battery voltage using a digital multimeter.

## VOLTAGE:

Fully charged: 13.0 - 13.2V

Under charged: Below 12.3V

## TOOL:

Digital multimeter

Commercially available or available through American Honda Tool and Equipment Program

