


REMOVAL

Remove the screws and headlight unit.

Disconnect the headlight bulb connector (page 19-4).
Remove the position light bulb socket (page 19-4).




Remove the wires from the clamps.
Remove the bolts, clamps/nuts and headlight case.
Remove the wires from the headlight case.

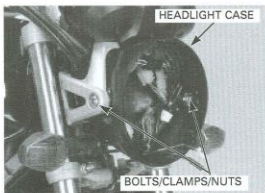**INSTALLATION**

Install the wires to the headlight hole.

Install the headlight case, then align the index line of the headlight case and turn signal light bracket.

Install the bolts, nuts/clamps and tighten them.

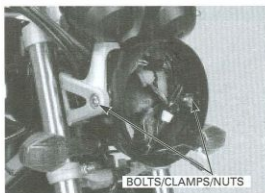

Install the wires to the clamp as shown.

Route the wires properly (page 1-22).

