



## SIDE STAND SWITCH

### INSPECTION

Disconnect the side stand switch 2P (Green) connector.

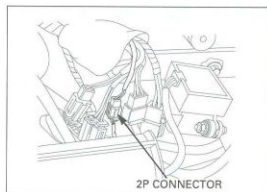


Check for continuity between the wire terminals of the side stand switch connector.  
Continuity should exist only when the side stand is UP.

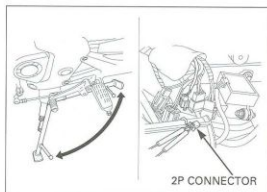

### REMOVAL

Disconnect the side stand switch 2P (Green) connector.

Remove the bolt and side stand switch.

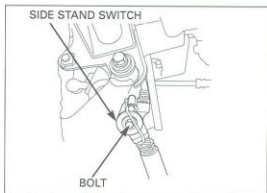

### INSTALLATION

Install the side stand switch by aligning the switch pin with the side stand hole and the switch groove with the return spring holding pin.

Secure the side stand switch with a new bolt.

**TORQUE: 10 N·m (1.0 kgf-m, 7 lbf-ft)**

