


Connect the side stand switch 2P (Green) connector.


Install the side cover (page 2-2).

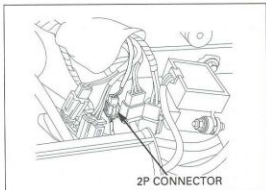

## HORN

Disconnect the wire connectors from the horn.

Connect the 12V battery to the horn terminal directly. The horn is normal if it sounds when the 12 V battery is connected across the horn terminals.

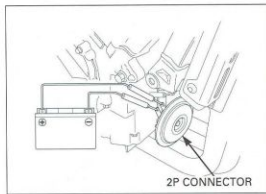

## TURN SIGNAL RELAY

### INSPECTION

Check the following:

- Battery condition
- Burned out bulb or non-specified wattage
- Burned fuse
- Ignition switch and turn signal switch function
- Loose connectors

If the above items are all normal, check the following:

Remove the rear cowl (page 2-3).

Disconnect the turn signal connectors from the relay.

Short the White/green and Gray terminals of the turn signal relay connector with a jumper wire. Start the engine and check the turn signal light by turning the switch ON.

Light comes on

Light does not come on

Check for continuity between the Green terminal of the relay connector and ground.

Continuity

No continuity

- Faulty turn signal relay.
- Poor connection of the connector.

- Broken wire harness

- Broken wire harness

