



- The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
- Do not loosen or tighten the white painted fasteners. Loosening or tightening it can cause throttle body malfunction.
- Do not hold the throttle drum when installing the sensor unit.

Sensor unit

- Throttle body → 2-8
- [1] Install the sensor unit to the throttle body by aligning the clip of the sensor unit and boss of the throttle valve.
- Perform the ECM initialization procedure. → 2-10

IACV

- Fuel tank shroud → 3-6
- Check the IACV for wear or damage.
- The IACV operation can be checked visually as follows:
 1. Connect the IACV 4P connector.
 2. Turn ignition switch ON, check the slide piece [A] operation.