



-  Install the bearing remover head into the bearing. From the opposite side, install the bearing remover shaft and drive out the bearing from the wheel hub.

**Remover head, 15 mm: 07746-0050400**

**Bearing remover shaft: 07746-0050100**

-   Drive in a new bearing squarely with its marked side facing outside until it is fully seated.  
**Driver: 07749-0010000**  
**Attachment, 42 x 47 mm: 07746-0010300**  
**Pilot, 15 mm: 07746-0040300**
-   Install the distance collar.
- Wheel disassembly and inspection



Basic