

Frame	Location	Material	Remarks
Steering stem bearing and dust seal lips Left second master cylinder link needle bearings and oil seal Wheel bearing dust seal lips Fork bottom case needle bearings Secondary master cylinder arm bearings Secondary master cylinder arm oil seals Swingarm pivot nut seating surface Shock arm/shock link bearing and oil seal Rear wheel and driven flange sliding area Swingarm pivot bearing/dust seal Wheel axle and swingarm outer surface Throttle cable end Center stand pivot surface Side stand pivot surface Brake pedal pivot Gearshift pedal pivot Seat lock striker Dust seal lips	Multi-purpose grease		Apply thin coat of grease
Handlebar (throttle grip sliding surface) Swingarm pivot dust seal lips Swingarm pivot needle bearings Shock arm pivot needle bearings/dust seal lips Shock link pivot needle bearings/dust seal lips Shock absorber lower mount dust seal lips Shock absorber lower mount needle bearing Side stand pivot sliding surface	Molybdenum disulfide grease		
Rear shock absorber upper metal bushing	Molybdenum paste		
Steering stem top threads Brake flare pipe threads	Engine oil		
Handle grip inside surface	Honda Bond A		
Brake lever pivot and piston contact area Brake caliper slide pin and boot inside Caliper dust seal Rear master cylinder push rod tips/boot inside Secondary master cylinder push rod tips/boot inside	Silicone grease		
Brake caliper slide pin threads Fork socket bolt threads	Locking agent		
Fork cap O-ring Fork oil seal lips	Fork fluid		
Brake master cylinder piston and cup Clutch master cylinder piston and cup Brake caliper piston and seal	DOT 4 break fluid		
Fan motor switch threads	Sealant		