


## Maintenance

Make sure that the pins are staked properly by measuring the diameter of the staked area using a slide calipers.

**Diameter of the staked area:**

**DID: 5.5–5.8 mm (0.22–0.23 in)**


**RK: 5.55–5.85 mm (0.219–0.230 in)**

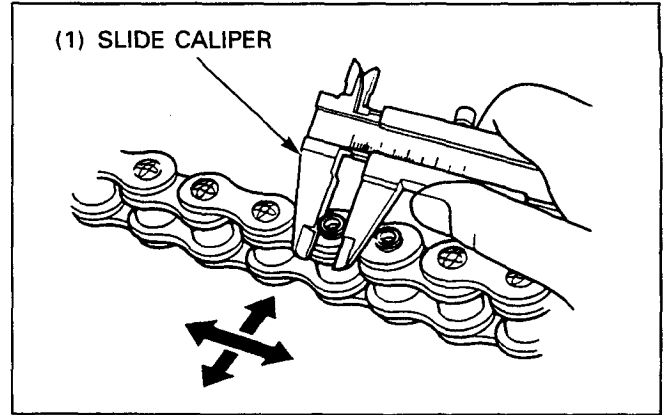

After staking, check the staked area of the master link for cracks. In there is any cracking, replace the master link, O-rings and plate.

### CAUTION

- Drive chain with clip-type master link must not be used.

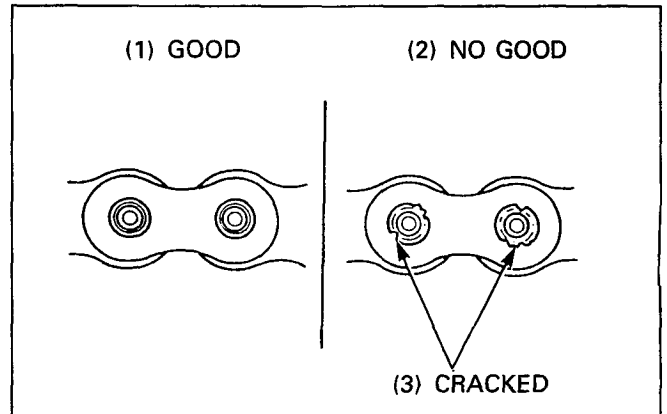

## Brake Pad Wear

Visually inspect the brake pad wear.

Replace the brake pads if either pad is worn to the bottom of the wear grooves.

