


## Oil Cooler Removal/Installation

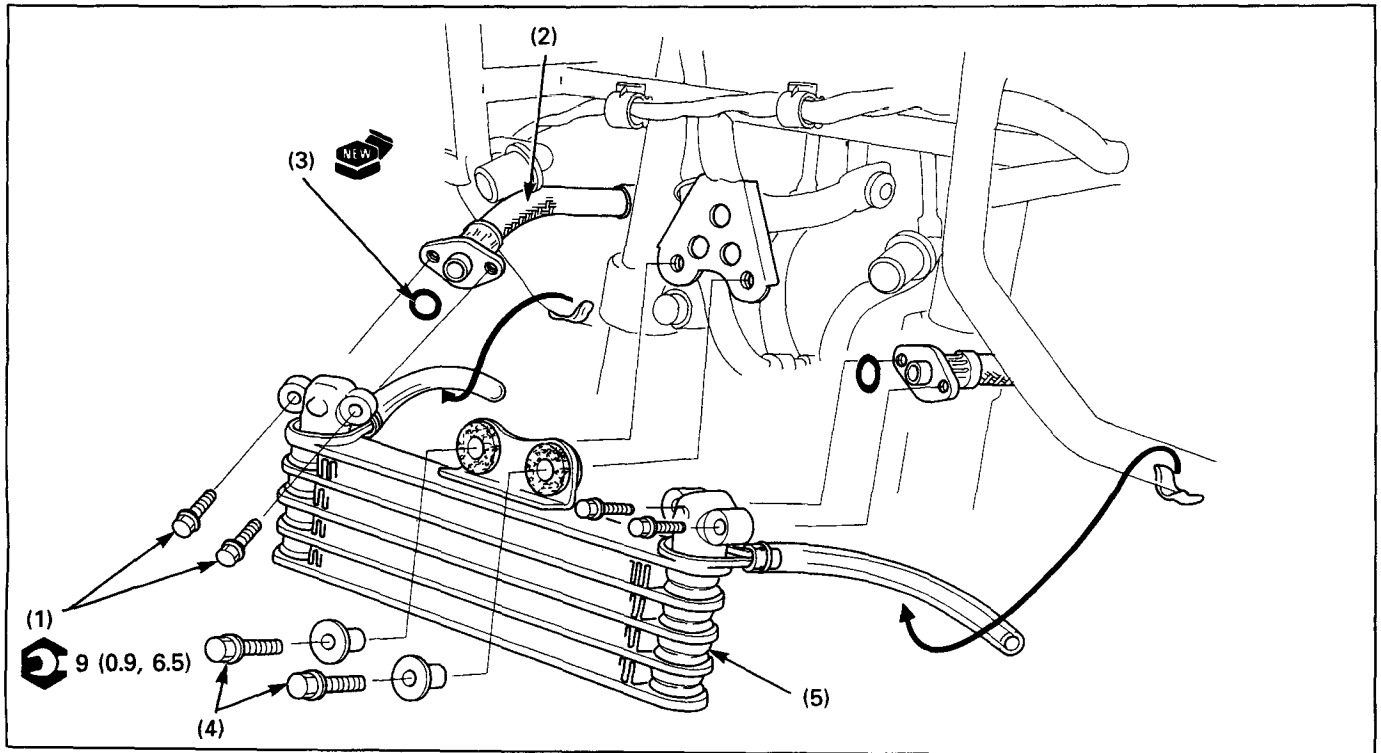

**NOTE**

- Use care not allow dust and dirt to enter the engine.
- After installation, check that there are no oil leaks.

**Requisite Service**

- Engine oil draining/refilling
- Lower fairing removal/installation (page 2-6)

Procedure		Q'ty	Remarks
<b>Removal Order</b>			Installation is in the reverse order of removal.
(1)	Oil pipe bolt	4	
(2)	Oil pipe	2	
(3)	O-ring	2	
(4)	Oil cooler bolt/collar	2/2	
(5)	Oil cooler	1	