

**⚠ WARNING**

• Gasoline is extremely flammable and is explosive under certain conditions.

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area where gasoline is stored can cause a fire or explosion.

**NOTE**

• Route the drain and fuel tubes correctly (page 1-23)

**Requisite Service**

- Fuel tank removal/installation (page 2-9)

Procedure		Q'ty	Remarks
	<b>Removal Order</b>		Installation is in the reverse order of removal.
(1)	Insulator band screw	8	Only loosen.
(2)	Air hose	1	
(3)	Choke cable	1	
(4)	Air bent tube	2	
(5)	Throttle cable	2	
(6)	Fuel tube	1	
(7)	Carburetor assembly	1	NOTE
			<ul style="list-style-type: none"> <li>• Remove the carburetor assembly from the insulator.</li> <li>• After removing the carburetor assembly, do not place it up side down or the air intake might be deformed.</li> </ul>