

Requisite Service

- Carburetor removal/installation (page 5-4)

Procedure		Q'ty	Remarks
Separate No.3/4 carb. from No.1/2 carb.			
(1)	Fuel tube/joint	1	
(2)	Starting enrichment valve arm screw	2	
(3)	Plastic washer	2	
(4)	Starting enrichment valve arm	1	
(5)	Thrust spring	1	
(6)	Plastic collar	2	
(7)	Carburetor connecting nut/bolt, 6mm	2/1	
(8)	Carburetor connecting nut/bolt, 5mm	2/1	
(9)	Starting enrichment valve cable holder	1	
(10)	No.2 carburetor synchronization spring	1	
(11)	Air joint pipe (3-way joint)/O-ring	1/2	
(12)	Dowel pin (6mm bolt side)	1	
(13)	Distance collared dowel pin (5mm bolt side)	1	
Separate No.1 carb. from No.2 carb.			
(14)	No.1 carburetor synchronization spring	1	
(15)	Thrust spring	1	
(16)	Air joint rubber pipe	1	
(17)	Air vent joint pipe/O-ring	1/2	
(18)	Fuel joint pipe (3-way joint)/O-ring	1/2	
(19)	Dowel pin (6mm bolt side)	1	
(20)	Dowel pin (5mm bolt side)	1	
Separate No.3 carb. from No.4 carb.			
(21)	No.4 carburetor synchronization spring	1	
(22)	Thrust spring	1	
(23)	Air joint rubber pipe	1	
(24)	Air vent joint pipe/O-ring	1/2	
(25)	Fuel joint pipe (3-way joint)/O-ring	1/2	
(26)	Dowel pin (6mm bolt side)	1	
(27)	Dowel pin (5mm bolt side)	1	