


Align the cut out on the air funnel with the groove in the carburetor body, then install the air funnel/holder.

Install and tighten the air funnel holder screws.

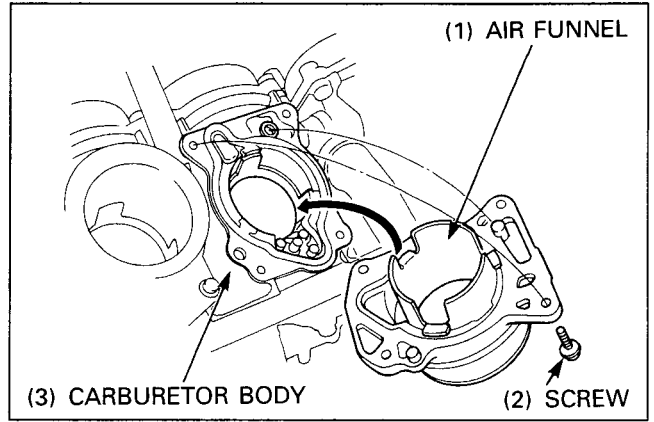

Carburetor Body Cleaning

Clean the fuel strainer in the float valve using the compressed air from the float valve seat side.

