

⚠ WARNING

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

NOTE

- Replace the bearings in pairs.
- Do not add more than 60 grams of the balance weight to the wheel.

Requisite Service

- Front wheel removal/installation (page 11-6)

Procedure		Q'ty	Remarks
	Disassembly Order		Assembly is in the reverse order of removal.
(1)	Brake disc mounting bolt	12	
(2)	Brake disc	2	NOTE • At installation, install each disc with their stamped side facing out.
(3)	Shim	12	
(4)	Dust seal	2	
(5)	Right wheel bearing (6004)	1	
(6)	Distance collar	1	
(7)	Left wheel bearing (6004)	1	NOTE • At assembly, drive in the left side bearing first, then the right side bearing.